

Contents

SYSTEM MANAGER MANUAL**Chapter 1:****Install the Aristel Manager System**

Before installation

Hardware requirement

To review the installation disk

To install Aristel Manager System

STEP x STEP

To run Aristel Manager System

Chapter 2:**To browse Aristel Manager System**

To start Aristel Manager System

Configuration

Toolbar Buttons

Work Zone

Status Zone

Exit Aristel Manager System

Chapter 3:**How to use the Aristel Manager System**

Section 1 How to use the toolbar

Exiting Aristel Manager System

To create a file

To open a copy or file

To save a copy or file

Hardware setup

Data transformation (Computer \longleftrightarrow PBX)

Lock work area

Quick view

Aristel Manager setup

Printout PBX parameters

Data navigator

Aristel Manager System Manual

Emailing to Aristel

About Aristel Manager System

Section 2 Edit Data Area

Data Area printed page

System data area (Zone100, Zone200)

Zone100 System Timing Parameter

Zone200 System Function Parameter

Zone300 Data area (Zone301~Z310)

Zone301 System Password Setup

Zone302 Relay Function

Zone303 Sensor Function

Zone305 System Alarm Clock

Zone306 Day Time Schedule

Zone307 SMDR Report

Zone308 Midday Time

Zone310 Company Name

Zone400-1 System Function (Zone400~403)

Zone400 Console Arrangement

Zone401 One Digit Dialing (ODD) Function

Zone402 Voice Service

Zone403 Forced Account Code (FAC)

Zone400-2 System Function (Zone405~411)

Zone405 Toll Group Assignment

Zone406 Common Allowed Code

Zone407 Common Disallowed Code

Zone408 Area Code-A

Zone409 Area Code-B

Zone410 Office Code-A

Zone411 Office Code-B

KeyPad Area (Zone500~501)

Zone500 Key Group Assignment (For KP)

Zone501 Key Group Assignment (For DSS)

Zone500 Station Function (Zone502~509)

Zone502 Station Function-Port Parameter

Zone503 Station Function-Grouping

Zone504 Station Function-Station Level

Zone505 Station Function-General Function 1

Aristel

Aristel System Manager

Zone506 Station Function-General Function 2

Zone507 Station Function-General Function 3

Zone508 Station Function

Zone509 Station Function-Individual SPD

Block

Zone600-1 CO Function (Z600~606,609)

Zone600 Incoming Ringing Assignment-Day Time

Zone601 Incoming Ringing Assignment-Night

Time

Zone602 Door Ring Assignment

Zone603 CO Group Assignment

Zone604 CO Function Assignment

Zone605 CO Lock

Zone606 CO Incoming Ringing Frequency

Assignment

Zone609 Voice Channel For Different CO

Line

Zone612 ISDN Termination

Zone613 ISDN Type

Zone614 EH64 Time

Zone615 CO Conference

Zone616 CO Special Function

Zone600-2 CO Function (Z607~8,ISDN)

Zone607 Single Digit Group For DISA

Dialing

Zone608 Incoming CO Line Group

Zone610 ISDN DID Number

Zone611 ISDN DID Station Lookup

Speed Dial Code Assignment (Zone404)

Section 3 Status Description

Chapter 1 Installation

Installation Considerations

Before installing Aristel SM, please make sure that your PC meets the following basic requirements.

Hardware requirements:

CPU: Pentium 166 or above

Memory and Storage Device: more than 32MB.

Hard Disk: more than 30 MB.

Display resolution: 800 x 600.

To review the installation disk




Click Setup.exe and proceed with the installation procedures.

Installation:

Please review the installation disk before installing the system manager system and refer to the procedures to run the disk□


Installing Procedures:

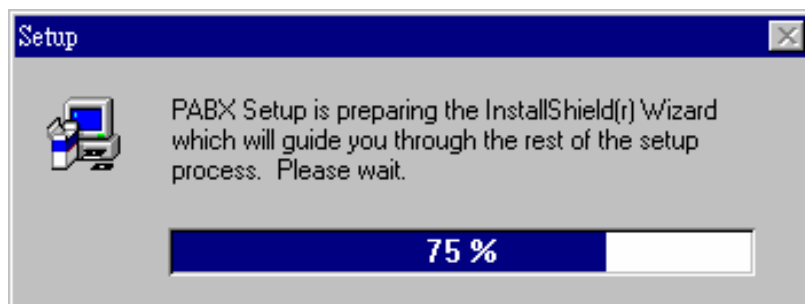


(1) Click *Setup.exe* and start the installing procedures.

Aristel


Aristel System Manager

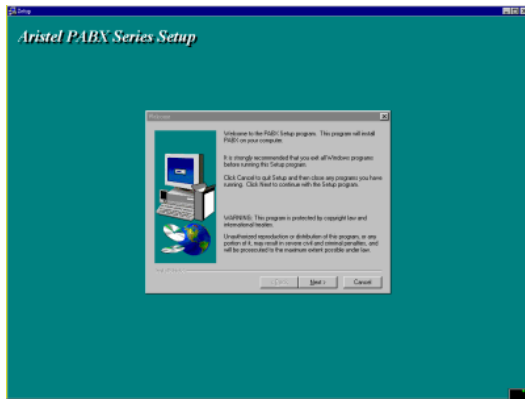


(2) Warning about Intelligent Property.

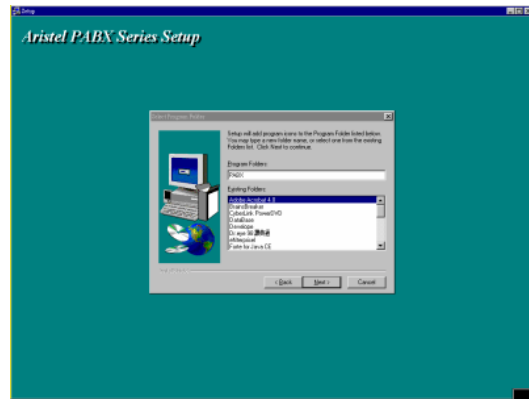


(5) Select the Installation Group Name.

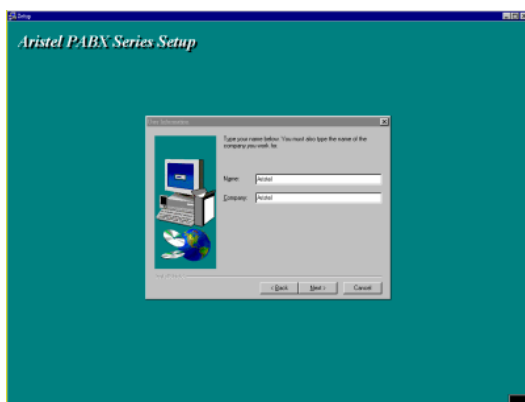


(3) Enter the User's information.

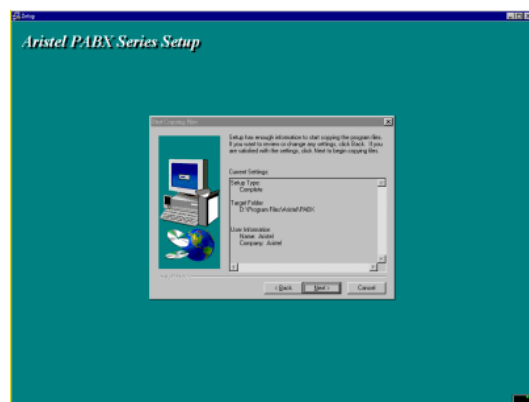

(6) Check the Installation Message.

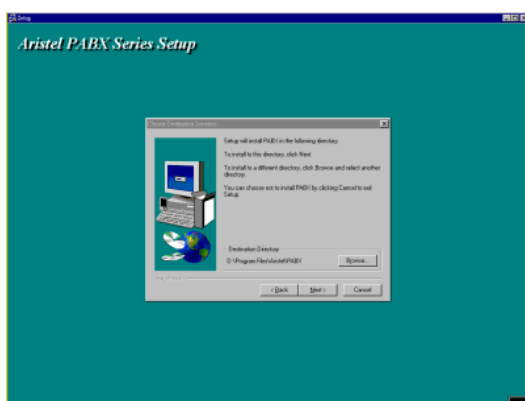


(4) Select the Installation Menu.

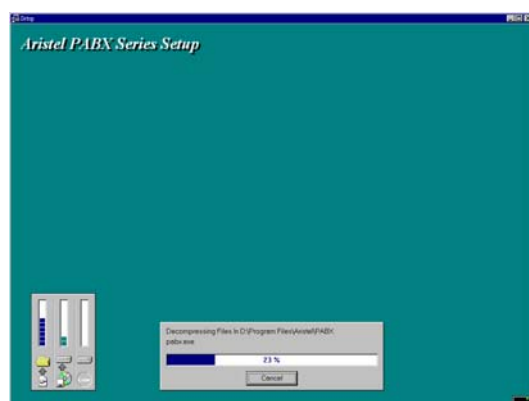

(7) Begin the Installation Procedures.

Aristel

Aristel System Manager

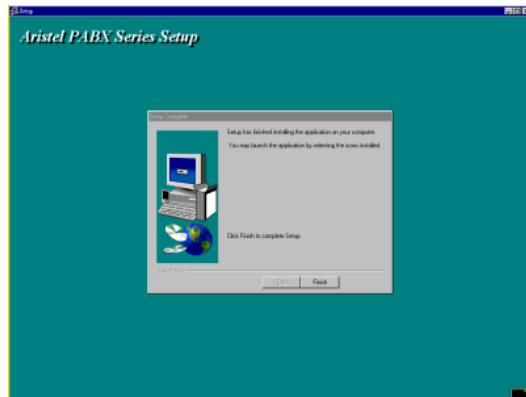

(8) Finish the Installation Procedures.



(9) Set an Icon on the PC table.

How to start the Aristel Manager System

You have two options to start the system, you can now choose (1) shortcut or (2) start menu


(1) Shortcut:



To click the icon and starting the Aristel Manager System.

(2) Start menu:

[Start]→[Programs]→[Pabx]→[PABX Series]

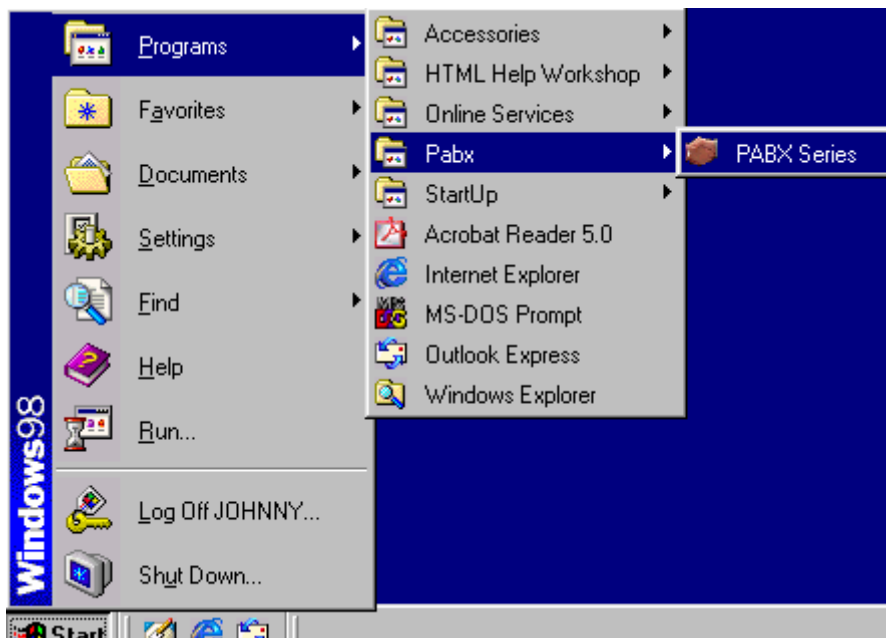


Chapter 2: To browse Aristel Manager System

To start the Aristel Manager System

Login to the Aristel PABX System Manager



Enter the Login Name and Password to login

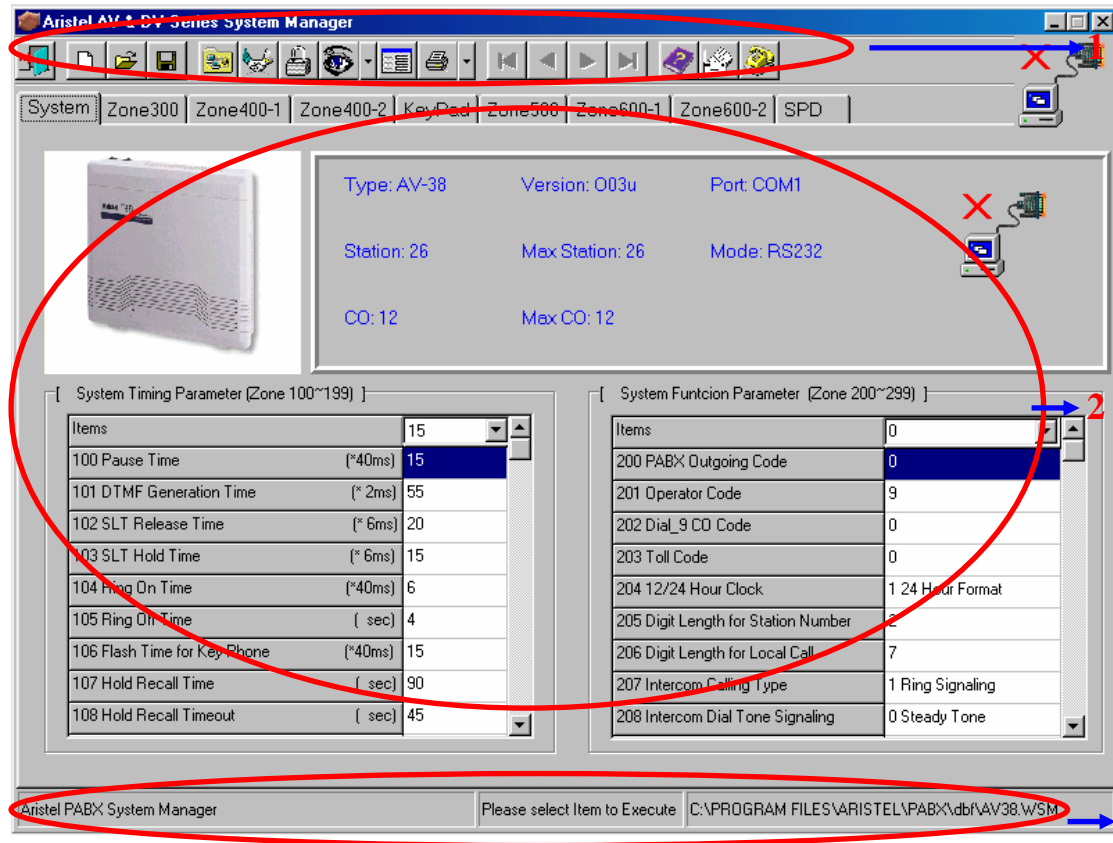

(1) Toolbar Buttons (2) Work Zone (3) Status Zone

Screen Description

Toolbar Buttons:

 


This Zone is the main center in the system. It includes functions and commands in all of our systems, and systems copyright, speed survey, data survey.

Work Zone


This Zone is used with data displayed and revising the PBX parameters. When the revising is finished, the data is been handshaking.

You can also use the sheet label to choose the zone area that you want to do.





 Therefore, we can quick select the zone area that we want to change. Certainly, if you are familiar with the Aristel Systems, we will get more details at the next chapter.


Status Zone



This will show the feature is using and the status, there will get more details in the next chapter.

Exit the Aristel Manager System

You can select the upper of the right screen  close icon or toolbar  to exit Aristel System Manager.

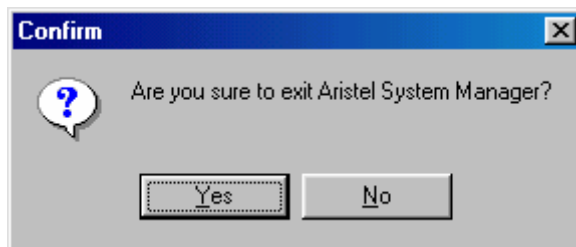


Click [Yes] and exit Aristel System

Chapter 3 How to use the Aristel Manager System


Section 1 How to use the Toolbar

Toolbar Description

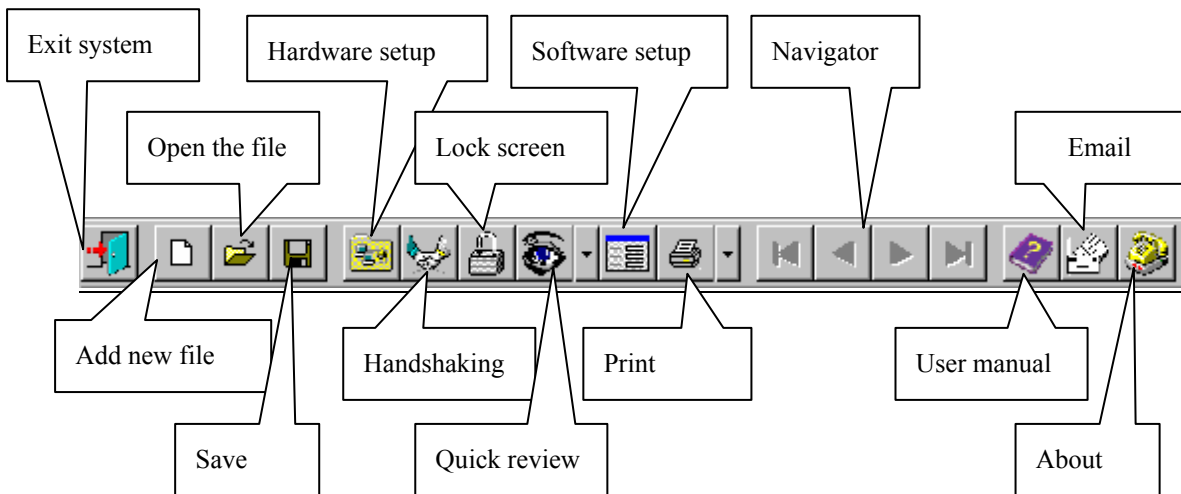


To exit Aristel Manager System: 


Click the icon  to exit Aristel System Manager and then you can see the confirmation message.

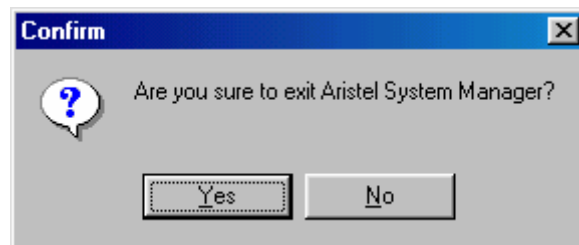


Select Yes option to exit Aristel system Manager!

Create a new file: 


Click the icon  to create a new file to be displayed. Please refer to the steps set out below, it will then download the systems info programming, parameters and so on.

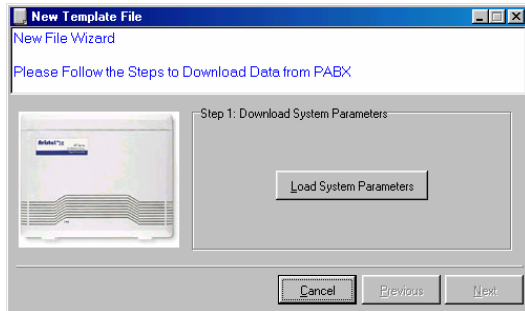


Enter this feature and load the system parameters

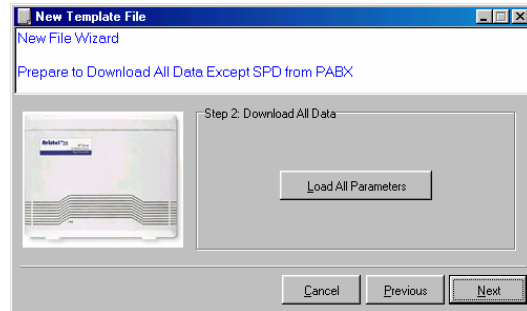


Download all parameters

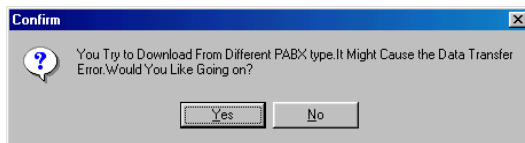


If you try to download from a different PABX type, the system will warn you!

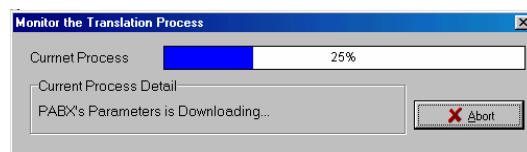


Click the Load All Parameters icon and it will start to download

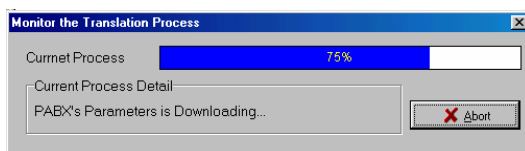


Click the Load All Parameters icon and it will start to download

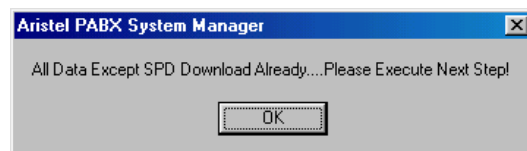

This will execute next step when the download is finished

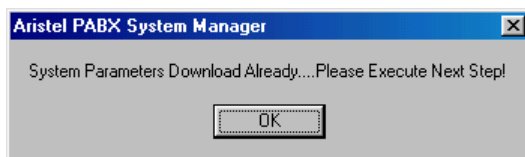


This will execute the next setup when the download is finished

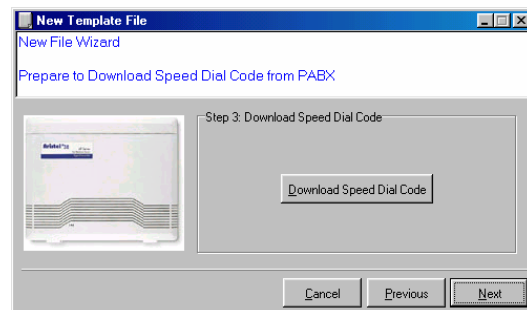


Start the Speed Dial Code download process

Aristel


Aristel System Manager

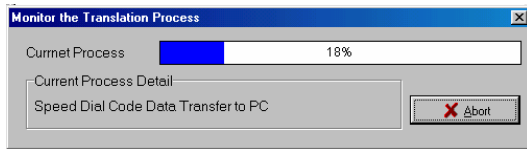

Click the Download icon to start

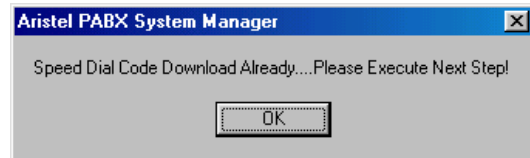

This will execute next step

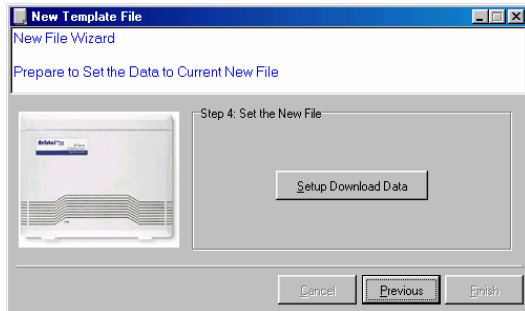



Enter the Setup Download Data


The new file has been created successfully and can be used to edit or save!



New template created already


Open a copy or file 

Click the icon  to OPEN copy or file feature , This will take the window for user which can choose the opening file.

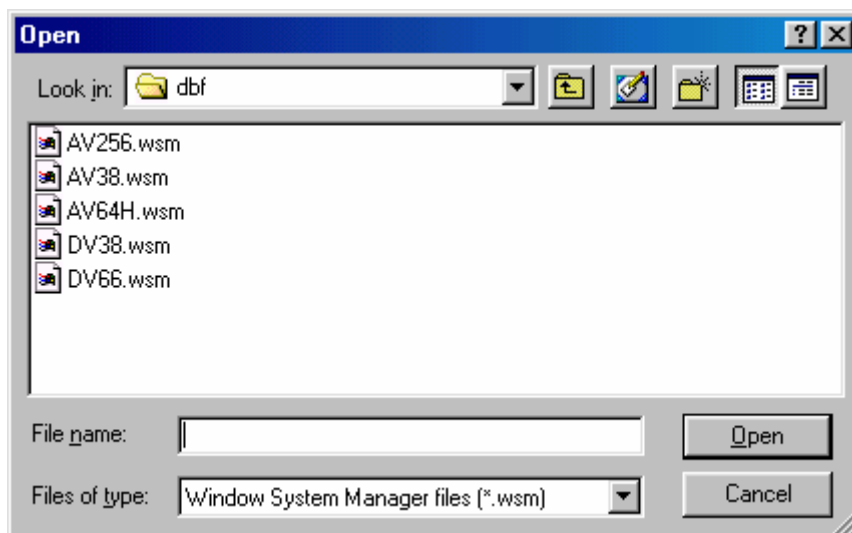


Please note that the files of type are *.wsm, it only shows the files with .wsm extension


Select the wanted file and click on it, the system will open to working area for user editing etc.

Save a copy or files: 


Click the icon  to SAVE copy or file feature, This will open the window for saving a file.

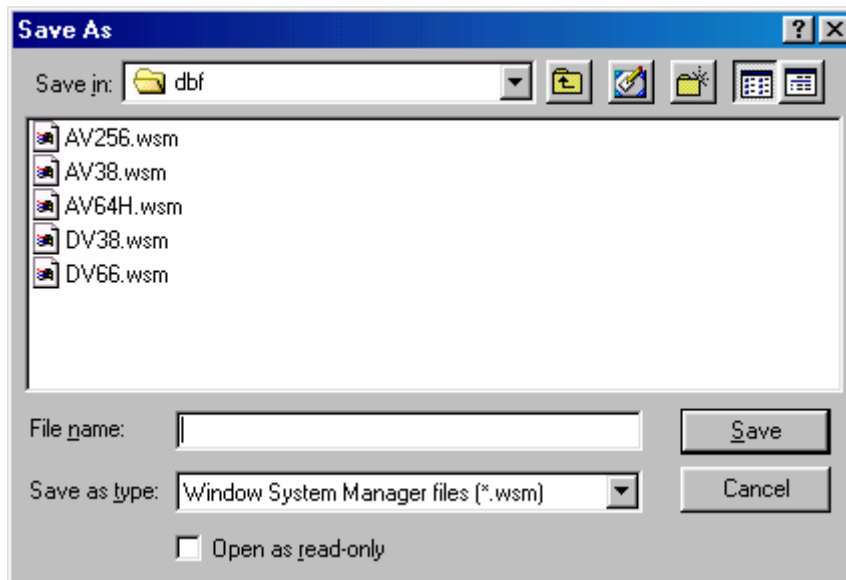

When you save the file, if you don't define the file as .wsm, the system will save as wsm file automatically.

Hardware setup 

Click the icon  to start hardware setup feature This will open the window for setting up the item.

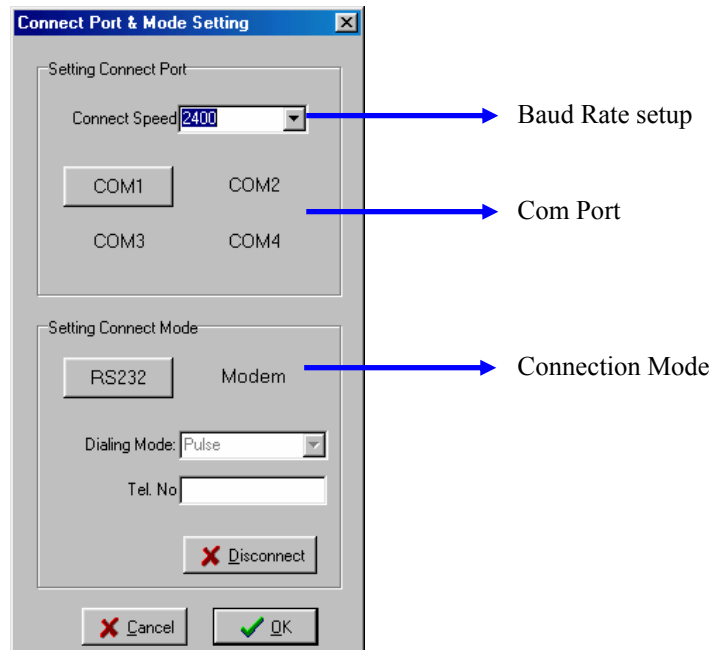


There is only one thing to be selected in Connection Mode. The different Connection Modes are for: (RS232 & Modem)

(RS232): When RS232 used, Please check the wiring and the COM port setting between the hardware connection while in RS232 mode. This is a local connection mode.


(Modem): When Modem is, used refer to the Remote control process.

Aristel


Aristel System Manager

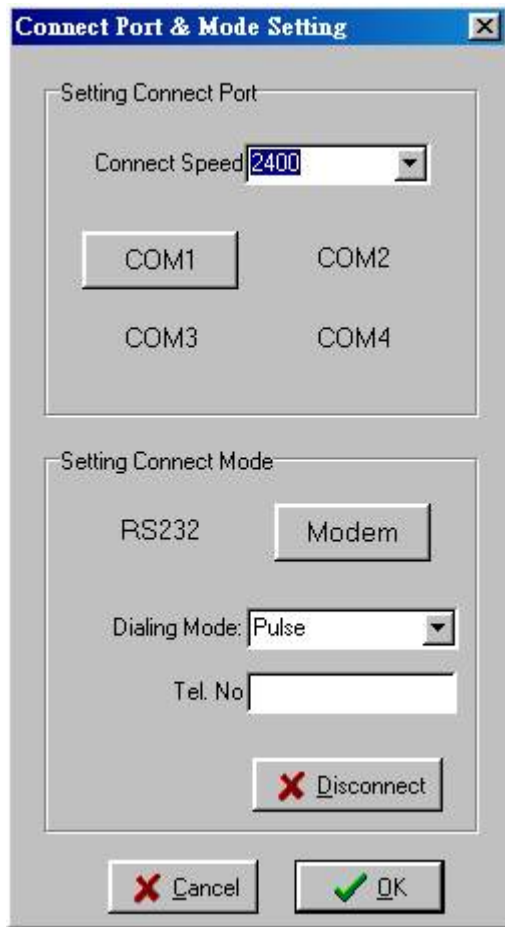


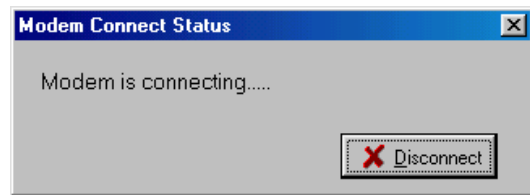
(1) Select the Modem icon, and then select [OK] to go on. Also to start the PABX RPC mode.

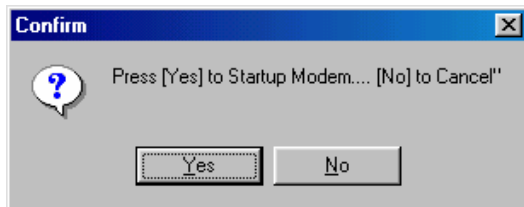

(2) Press [YES] to startup Modem when you are ready

Handshaking(PC \longleftrightarrow PABX) 

Click the icon  to enter handshaking feature, this will open the connect/handshake window.




(3) Press (SPD + Func .+ 6) at remote end & Modem tone will be received by computer




(4) This will display the successful message if connecting properly, or there is a wrong message as follow.



The next steps are the same as RS232 control process.

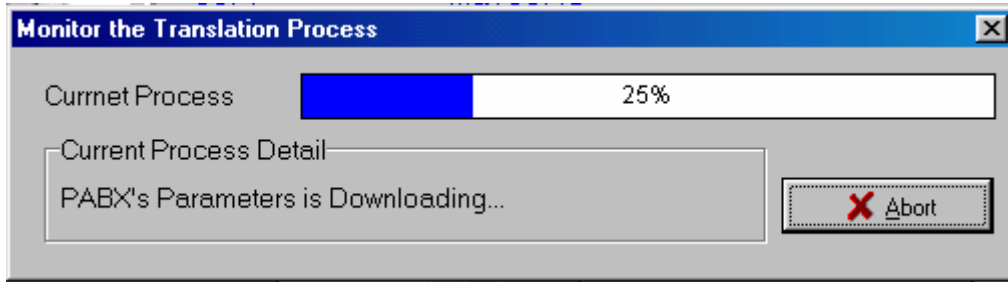


After transmission will go on to below step.

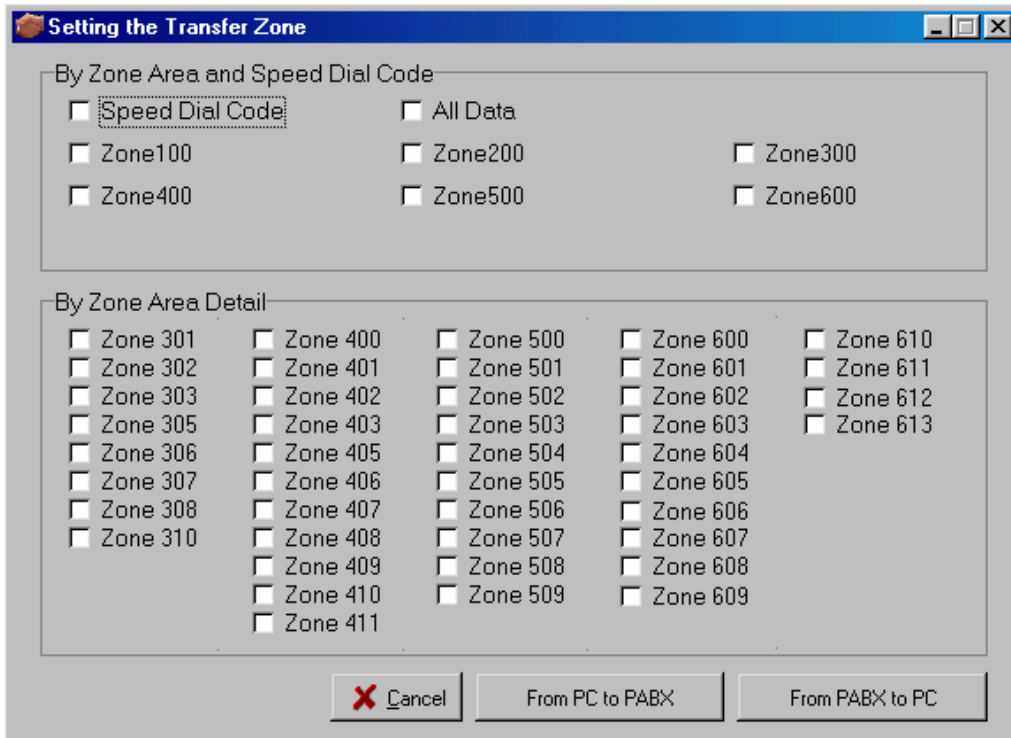


Setup the download or upload options



This will display the error message when no option is chosen

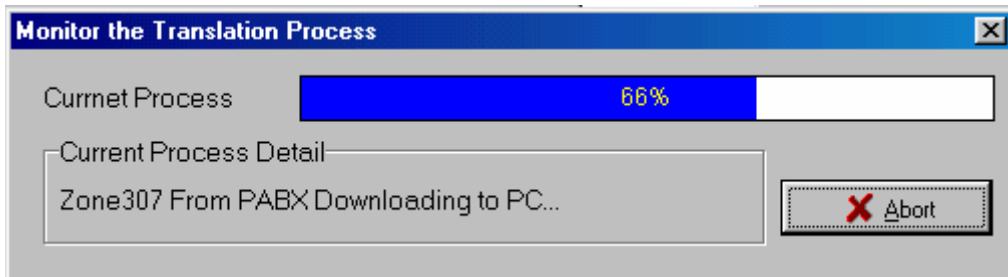


This will display the transmission progress and details when transmission is successful.

Lock Working Area 


Click the icon  to lock working area. This can protect the data if you leave for a while, and also it will protect all of your settings.

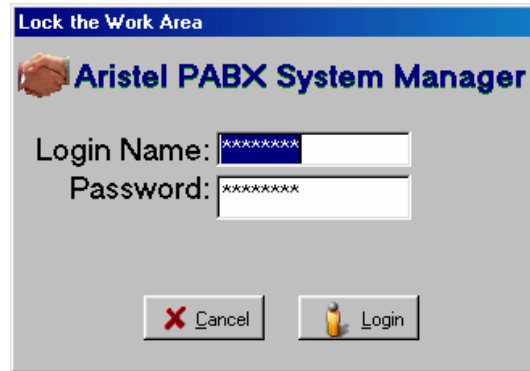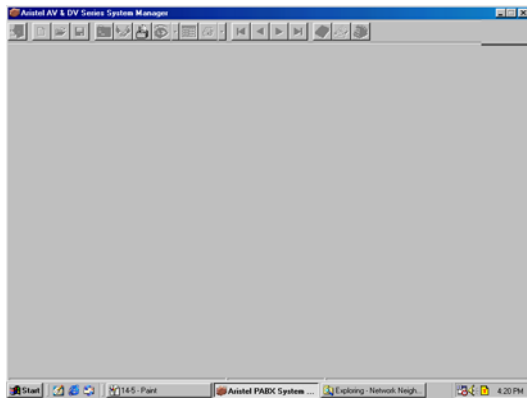

Press  again. This will display the Login Window.

Select the Lock feature and the working area will be hidden.

Quick Review: 


Click the icon  to enter quick review feature. This is convenient for user to search the working area immediately.




Please note that you must click the drop-down menu, it will show the Zone for setting.


This shows which zone will be chosen to be displayed.

System Parameters Setup: 


Click the icon  to enter parameters setup feature. This can allow the user to define the default parameters/features, such as login name, login password and default language.

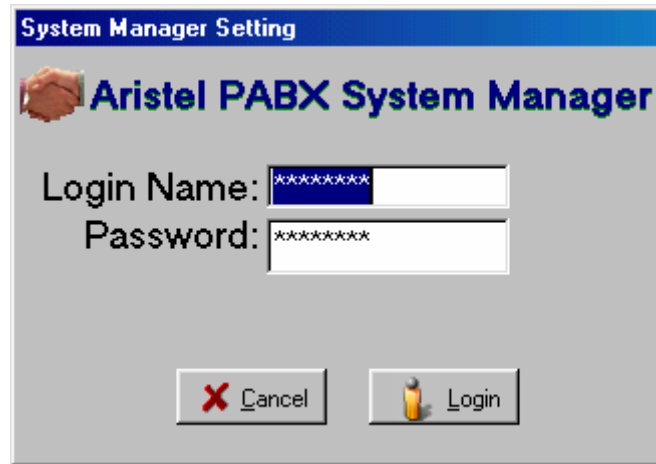


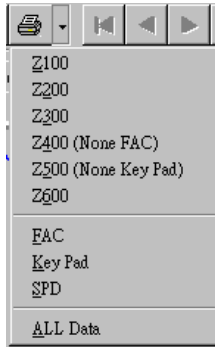
To enter the Login Name and Password first

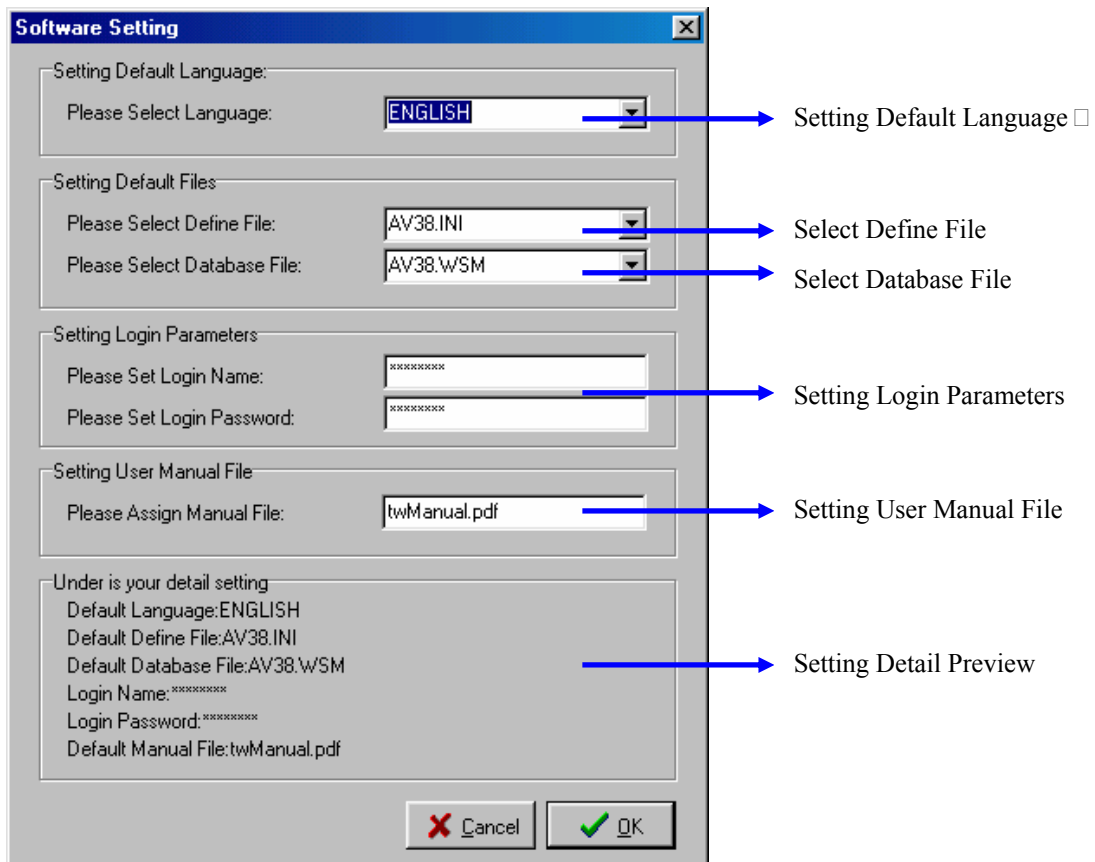


Press [OK] the setting will be saved in the system

Print Parameters Setup: 

Click the icon  to enter the print parameters feature. And also backup the print parameters.



Please note that you must click the drop- down menu to select which zone will be printout.

Navigator Icon: 

While labels are and the toolbar will be opened




This is convenient for user to setup the parameters easily.


Help 

Click the icon  to view the user manual

Email 

Click the icon  to activate the default emailing program and email to the local agent.

About 


Click the icon  to get the software version




information

Section 2. Edit Data Area Description


Data area:

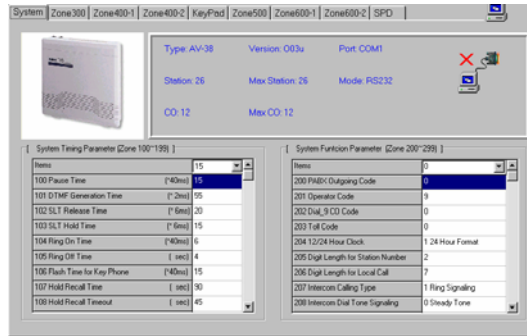


System Area

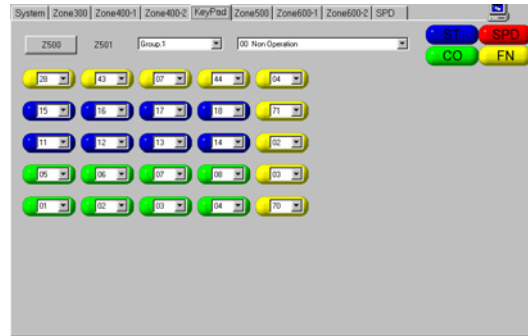


Zone500/501 DSS Setup

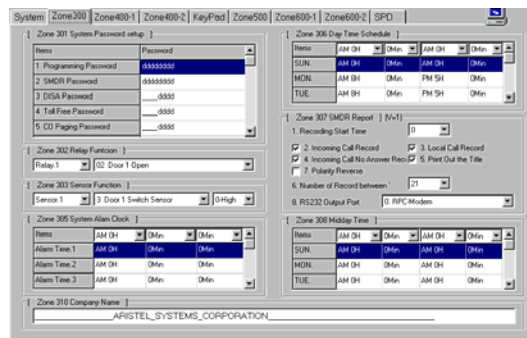


Zone 300~309 Area

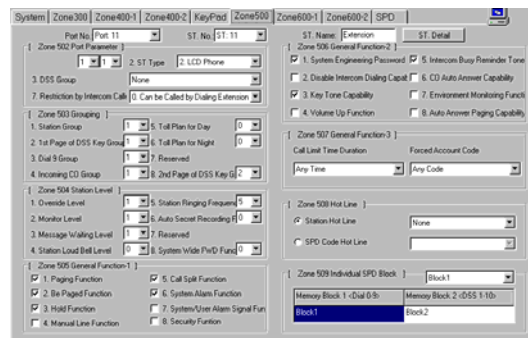


Zone 502~509 Area

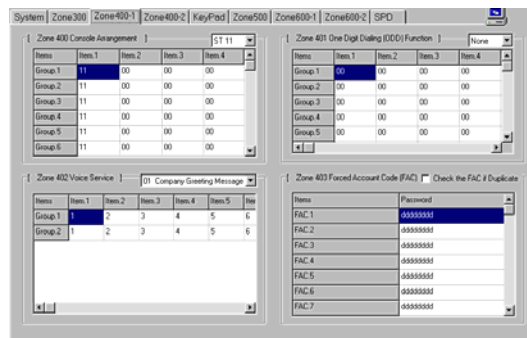

Zone 400~403 Area

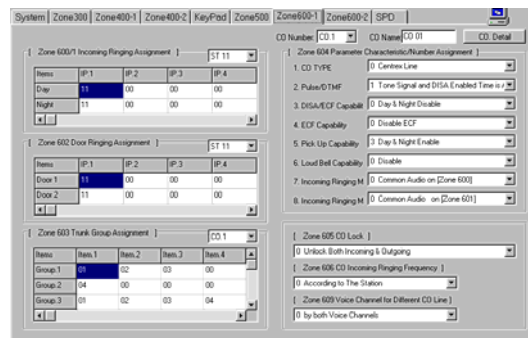


Zone 600~606 □□ Zone609 Area

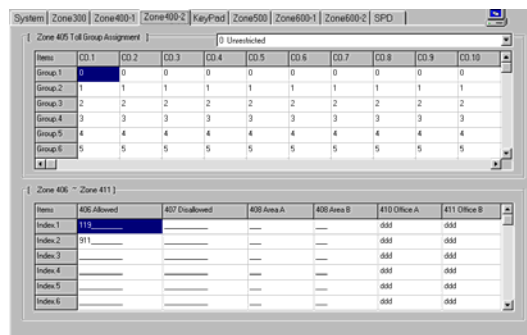

Zone 405~411 Area




Zone 607~608 and ISDN setup

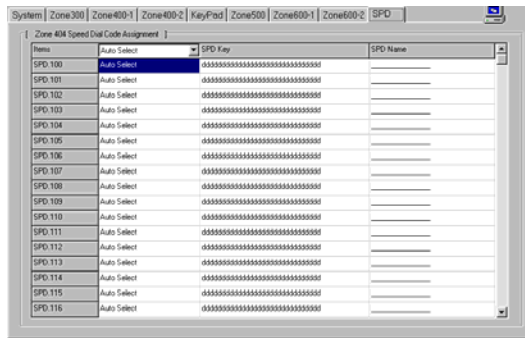


SPD Area

System Area (Zone100, Zone200)

This area includes Zone100 and Zone200 setup.

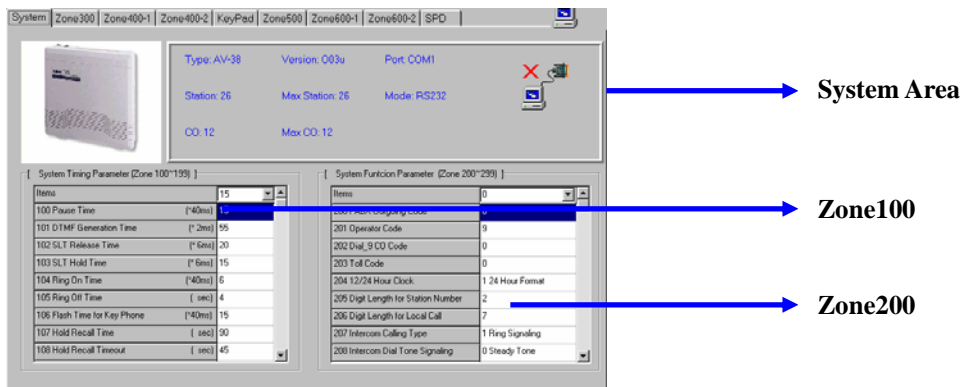

Characteristics of the System: Indicates the current configuration and software version of the System, such as type number, software version, trunk lines, extensions, transmission mode and connecting mode.

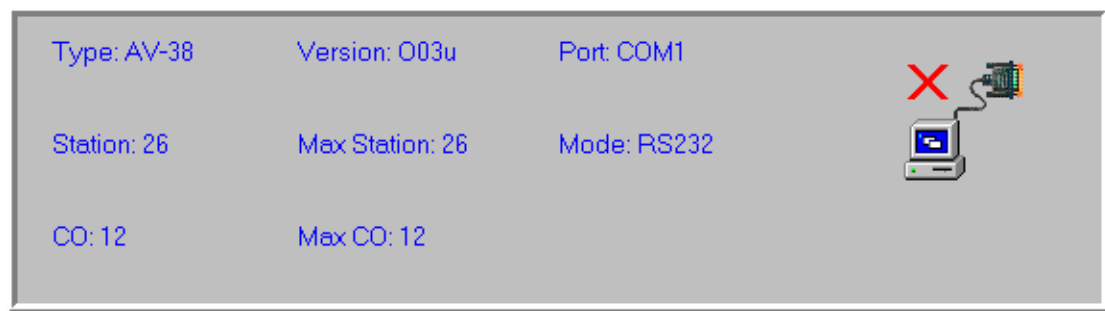

Zone100: for editing the setting value in Zone 100.

Items	20	
100 Pause Time (*40ms)	20	Function setting area: key-in or select the proper value
101 DTMF Generation Time (* 2ms)	55	
102 SLT Release Time (* 6ms)	30	
103 SLT Hold Time (* 6ms)	14	
104 Ring On Time (*40ms)	5	
105 Ring Off Time (sec)	4	
106 Flash Time for Key Phone (*40ms)	3	Function description area
107 Hold Recall Time (sec)	90	
108 Hold Recall Timeout (sec)	30	

Zone 200: for editing the setting value in Zone 200

System Function Parameter (Zone 200~299)		
Items	9	
200 PABX Outgoing Code	9	Function setting area: select the proper value from the listing
201 Operator Code	0	
202 Dial_9 CO Code	9	
203 Toll Code	0	
204 12/24 Hour Clock	0 12 Hour Format	
205 Digit Length for Station Number	2	
206 Digit Length for Local Call	0	
207 Intercom Calling Type	1 Ring Signaling	Function description area
208 Intercom Dial Tone Signaling	0 Steady Tone	

Zone 300 Function Zone (Zone 301 ~ Zone 310)

This function editing area is combining with those in Zone 100 and Zone 200.

Zone302 Relay Function

Zone 306 Day Time Schedule

Zone 301 System Password Setup

Zone307 SMDR Report

Zone 303 Sensor Function

Zone 308 Middy Time

Zone 305 System Alarm Clock

Zone 310 System Name

Zone 301 System Password Setup

Only numerical digits, “_” or “d” are allowed for key-in as System Password Setup. “d” means

Aristel

the characters of a space.

Aristel System Manager

Items	Password
1 Programming Password	dddddddd
2 SMDR Password	dddddddd
3 DISA Password	__ dddd
4 Toll Free Password	__ dddd
5 CO Paging Password	__ dddd

Zone 301 Password setting area

Zone 302 Relay Function

Only selecting the listed value is allowed for setting Relay Function.

Zone 303 Sensor Function

Only selecting the listed value is allowed for setting Sensor Function.

Zone 305 System Alarm Clock

Only selecting the listed value is allowed for setting System alarm clock.

Items	AM OH	OMin	OMin
Alarm Time.1	AM 0H	OMin	OMin
Alarm Time.2	AM 0H	OMin	OMin
Alarm Time.3	AM 0H	OMin	OMin

Zone 305 Alarm Clock Setting

Zone 305 Program Status Area

Point out the item to be programmed and then select the listed parameter.

Zone 306 Day Time Schedule

Only selecting the listed value is allowed for setting day time Schedule.

Items	AM OH	OMin	AM OH	OMin
SUN.	AM 0H	OMin	AM 0H	OMin
MON.	AM 8H	OMin	PM 5H	OMin
TUE.	AM 8H	OMin	PM 5H	OMin

Zone 306 Weekly Day/Night Setting

Zone 306 Program Status Area

Point out the item to be programmed and then select the listed parameter.

Zone 307 SMDR Report

Select the listed setting value or click the required modes.

1. Recording Start Time: 6

2. Incoming Call Record 3. Local Call Record

4. Incoming Call No Answer Recd 5. Print Out the Title

7. Polarity Reverse

6. Number of Record between: 26

8. RS232 Output Port: 3. RPC-RS232:SMDR-RSC,by 2 CLIC

- 0. RPC-Modem
- 1. RPC-RS232:SMDR-RSC
- 2. RPC-RS232:SMDR-RPC
- 3. RPC-RS232:SMDR-RSC,by 2 CLIC Bo
- 4. RPC-RS232:SMDR-RPC,by 2 CLID Bo
- 5. RPC-RS232,by 2 ISDN Card

Zone 308 Midday Time

Only selecting the listed value is allowed for setting Midday Time Schedule.

Items	AM OH	OMin	AM OH	OMin
SUN.	AM 0H	OMin	AM 0H	OMin
MON.	AM 0H	OMin	AM 0H	OMin
TUE.	AM 0H	OMin	AM 0H	OMin

Zone 308 Midday Time Setting

Zone 308 Program Status Area

Point out the item to be programmed and then select the listed parameter.

Zone 310 Company Name

Maximum 80 character digits are allowed for keying-in the company name or others.

[Zone 310 公司名稱]

_____ARISTEL_SYSTEMS_CORPORATION_____

Zone 400-1 Function Zone (Zone 400 ~ Zone 403)

This Zone 401-1 function editing area is combined with those in Zone 400 ~ Zone 403.

The screenshot shows the following panels and their corresponding labels:

- Zone 400 Console Arrangement:** A table with columns 'Items', 'Item.1', 'Item.2', 'Item.3', 'Item.4'. A blue arrow points to the 'Item.1' column header.
- Zone 401 One Digit Dialing Function:** A table with columns 'Items', 'Item.1', 'Item.2', 'Item.3', 'Item.4'. A blue arrow points to the 'Item.1' column header.
- Zone 402 Voice Service:** A table with columns 'Items', 'Item.1', 'Item.2', 'Item.3', 'Item.4', 'Item.5', 'Item.6'. A blue arrow points to the 'Item.1' column header.
- Zone 403 Forced Account:** A list of 'FAC' items with a 'Password' field. A blue arrow points to the 'Password' field.

Zone 400 Console Arrangement

This only allows the stations which have been defined.

The screenshot shows the 'Zone 400 Console Arrangement' window with the following elements and labels:


- Zone 400 Station Number Setting:** A blue arrow points to the 'ST 11' dropdown menu at the top right.
- Zone 400 Program Status Area:** A blue arrow points to the table area containing the following data:

Items	Item.1	Item.2	Item.3	Item.4
Group.1	11	00	00	00
Group.2	11	00	00	00
Group.3	11	00	00	00
Group.4	11	00	00	00
Group.5	11	00	00	00
Group.6	11	00	00	00

Click the item and use the pull-down menu to select the listed parameter, or you can define the station number directly. The system will detect the station numbers automatically which have been defined.

Zone 401 One Digit Dialing (ODD) Function


This only allows the stations which have been defined.

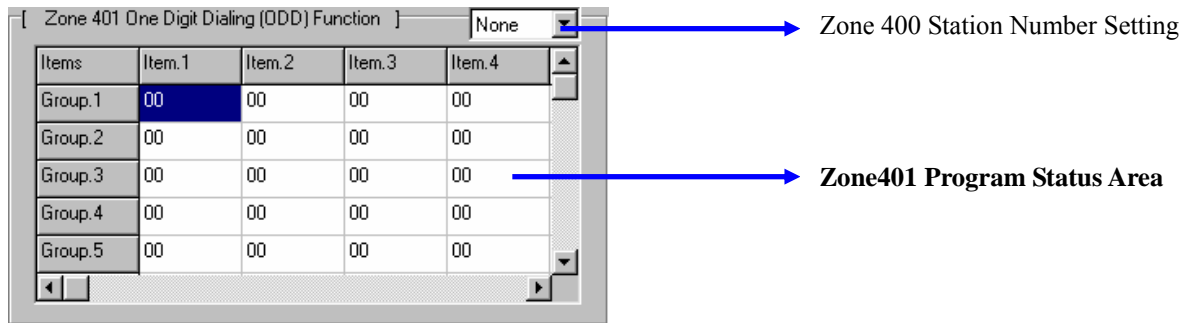

Click the item and use the pull-down menu to select the listed parameter, or you can define the station number directly. The system will detect the station numbers automatically which have been defined

Zone 402 Voice card Setup:


This only allows the stations which have been defined.

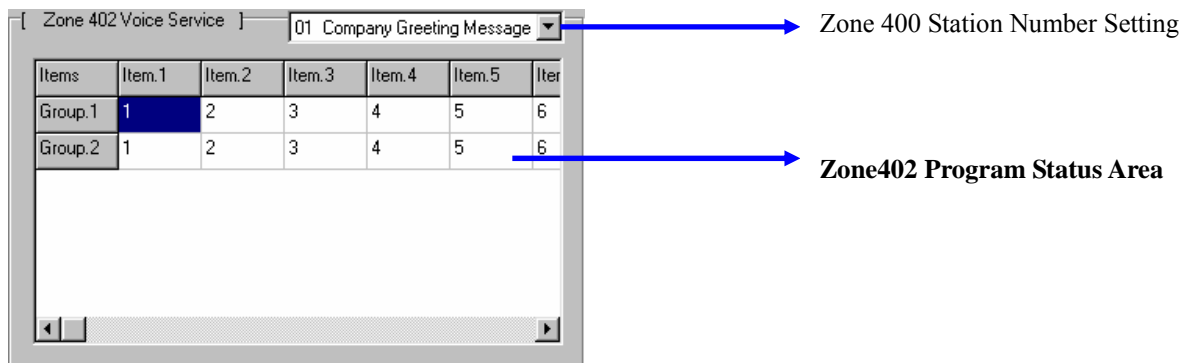

Click the item and use the pull-down menu to select the listed parameter, or you can define the station number directly. The system will detect the station numbers automatically which have been defined


Z403 Forced Account Code (FAC)

This only allows entering digits and also “_” and “d” meaning blank digits.

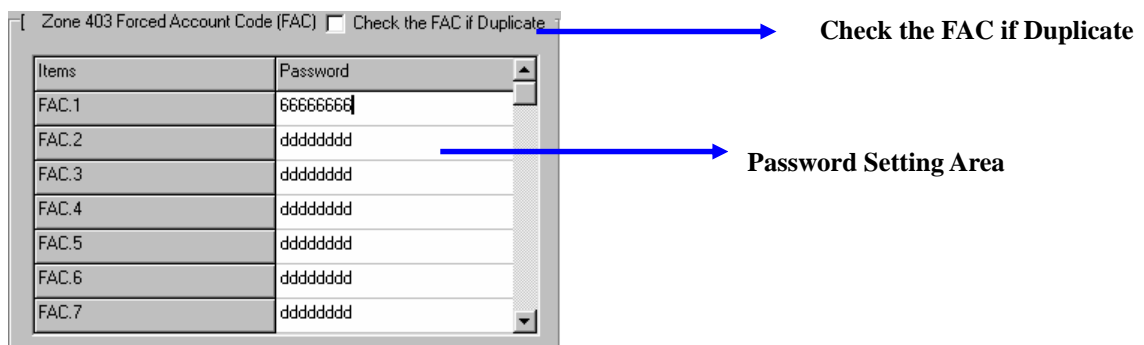

Zone400-2 System Function (Zone405~411)

Zone400-2 This function editing area is combined with those in Zone 405 and Zone 411.

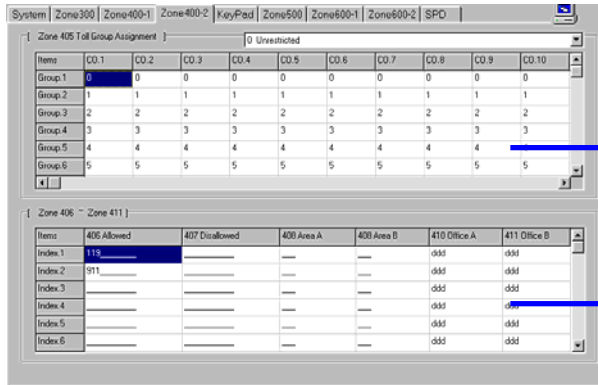


Zone405 Toll Group Assignment

Zone406~411 Setting Area

Z405 Toll Group Assignment:

This only allows the items which have been defined.

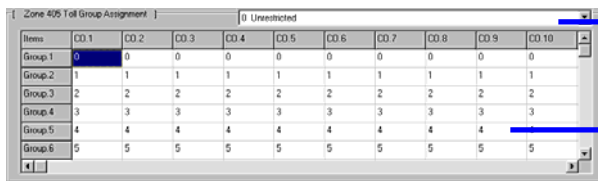


Zone405 Definiens Area

Zone405 Editing Area

Click the item and use the pull-down menu to select the listed parameters, or you can define the station number directly. The system will detect the station number automatically which have been defined.

Z406~411Password Setting:

This only allows entering digits and also “_” and “d” meaning blank digits.

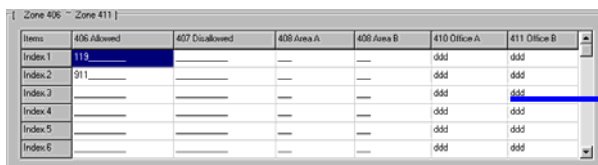


Zone406~411 Setting Area

Regarding the Password Setting refer to Zone301.

KeyPad Area (Zone500~501)

This function editing area is combined with those in Zone 405 and Zone 411.


This function editing is combined with those in Zone500~Zone501.

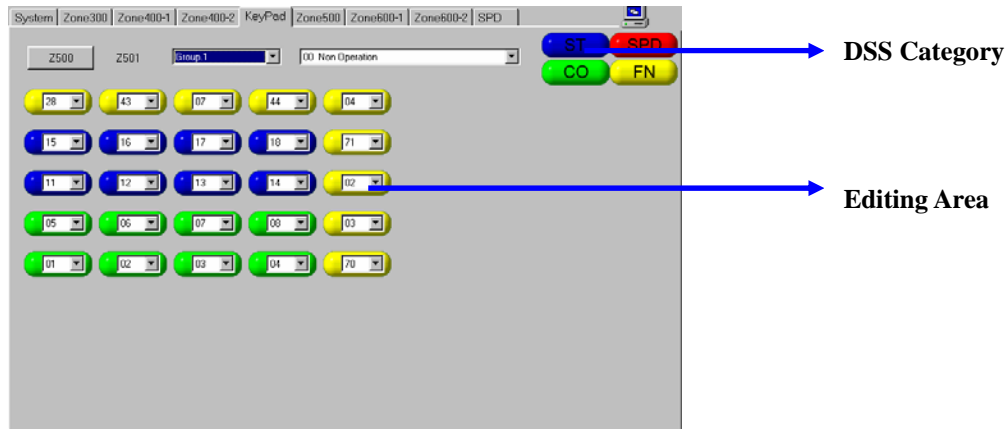


There are two main areas as the key Phone button. Zone 500 setting for 5x5 25 Key Phone, Zone501 Setting for 8x8 DSS64 Phone. Please refer to the following description.

Zone 500 Key Group Assignment (For KP):


Zone500 Assign DSS keys for Key Phone. Different Key Phone use different user interface.

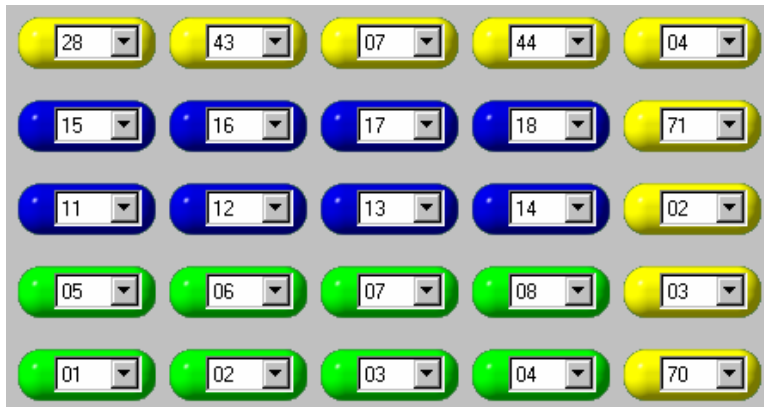


Zone 500 Setting Appearance (KP10, KP20, DKP20)

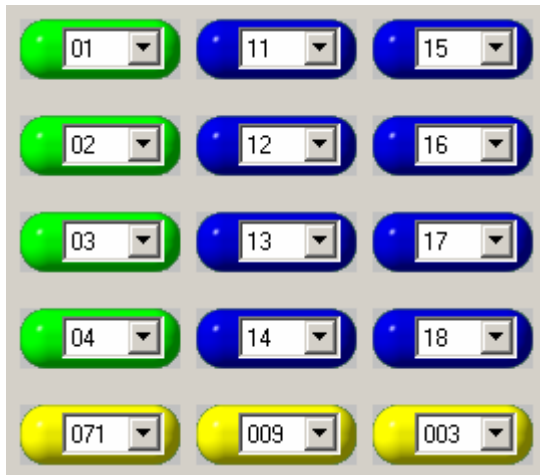


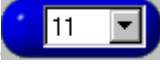


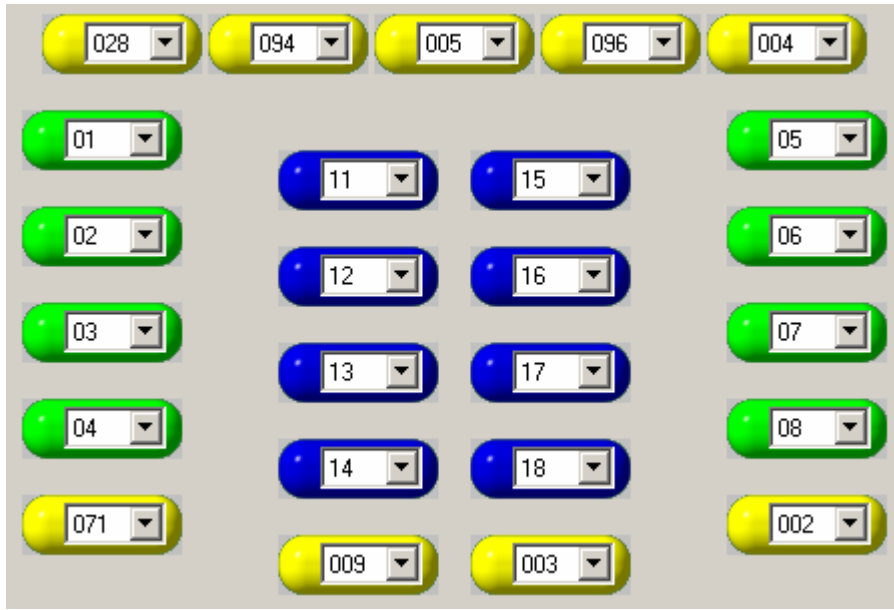Zone 500 Setting Appearance (DKP30)

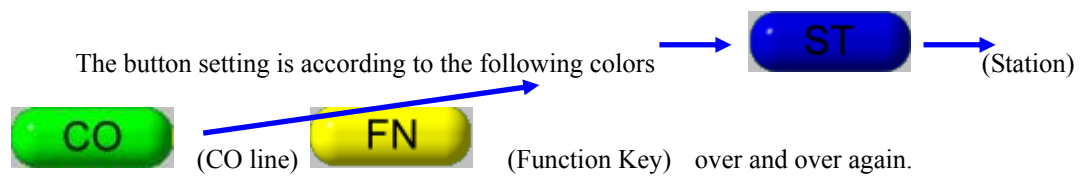

Zone 500 Setting Appearance (DKP50)



Eg: The original button is  click it and it will become  click it again and it will become  click it again and it will go back to  Therefore, the Zone500 DSS keys change from Station → Co line → Function Key, there are a few features different to Zone 501 setting there are more details in the following section.


Changing the DSS function with the drop-down list

Zone 501 Key Group Assignment (For DSS):

Zone501Assign DSS Keys for DSS Key Phone




Zone 501 Setting Appearance

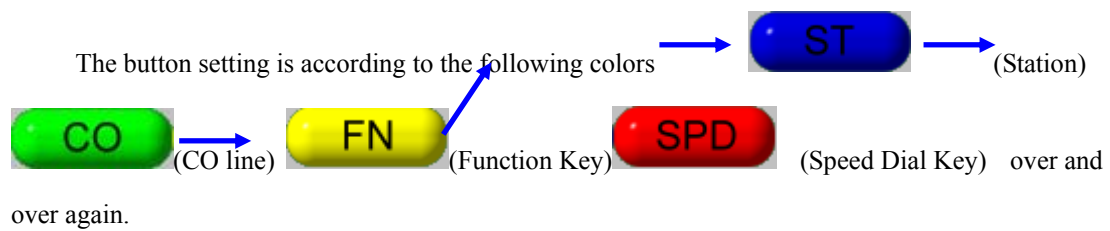

Eg: The original button is ,click it and it will become ,click it again and it will become ,click it again and it will become ,and click it again it will go back to ,therefore, Zone501 DSS Keys changes from Station → CO line → Function Key→ Speed Dial Key periodicity


Zone500 Station Function(Zone502~509)

This function editing area is combined with those in Zone502~Zone509.

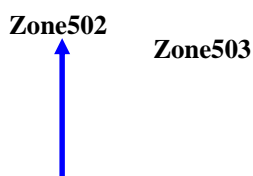


Aristel

Aristel System Manager

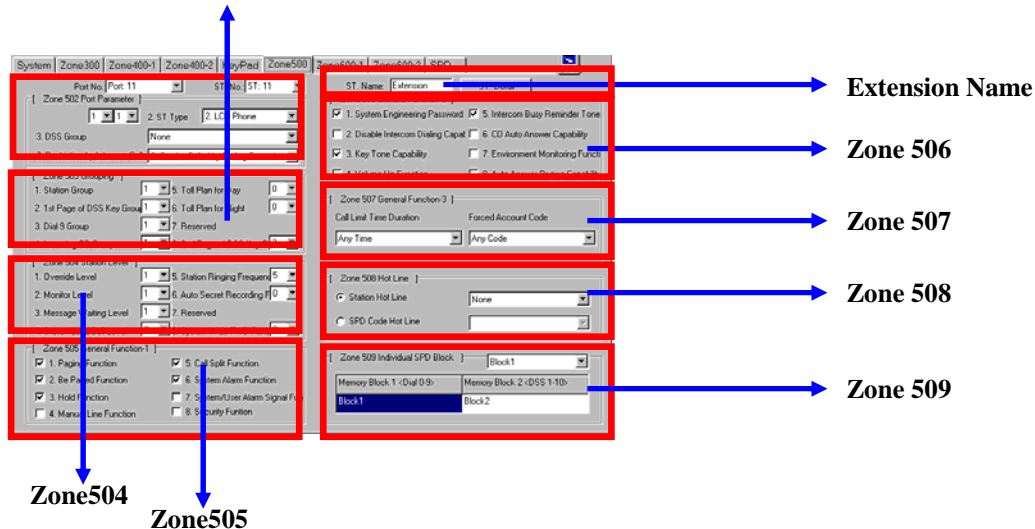

Zone 500 for setting Station Parameters area, Therefore, the station number is assigned according to the port. This is the most important setting area in this section

Zone 502 Station Function- Port Parameter

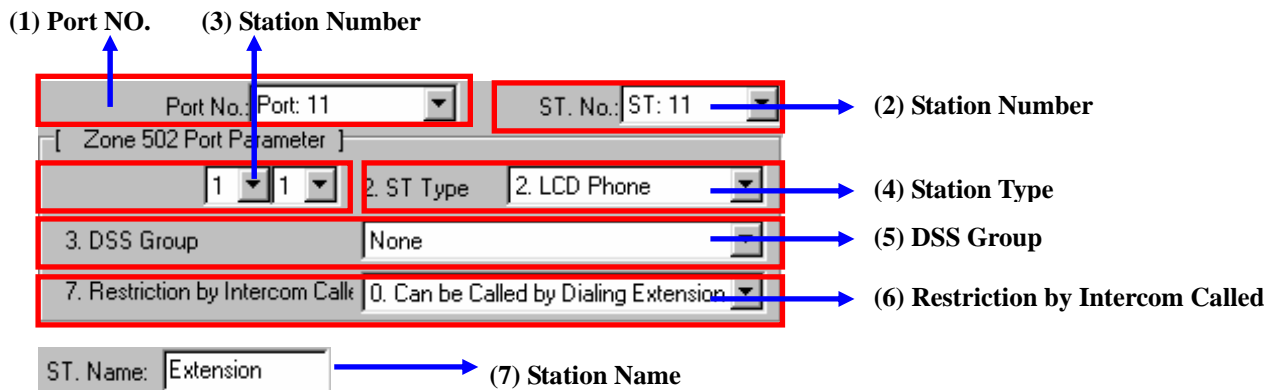

(1) Port Number:

This will be defined by the system automatically. This can be reviewed only and can not be modified this by software.

(2) Station Number:

This will be defined by the system automatically, and also you can define the station number in option 3 (Station Number) by yourself. Please note that the station digit length must be assigned in Program Zone 205.

When the station numbers have been assigned, they will affect the station numbers displayed in other items.

(3) Station Number:

Use the drop-down menu to select the port which relates to the station number, Also the Windows System Manager will confirm the station number has been set and display the window

Aristel

Aristel System Manager


below:



When the station number already exists, the number will go back to the default.

(4) Station Type:

Use the drop-down menu to select the station type. The station type will setup by PBX, or this could be downloaded in Program Zone502 from PBX to PC.

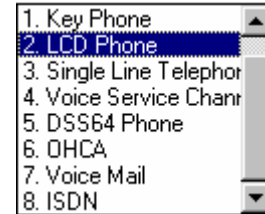


(5) DSS Group (For DSS Key Phone):

Use the drop-down menu to select the DSS Group

(6) Restriction by Intercom Called:

Use the drop-down menu to select the listing.

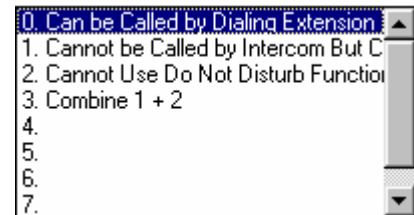

(7) Station Name:

Enter the Station Name direct.

Zone 503 Station Function-Grouping:

Zone503 Assign the station group

[Zone 503 Grouping]			
1. Station Group	1	5. Toll Plan for Day	0
2. 1st Page of DSS Key Group	1	6. Toll Plan for Night	0
3. Dial 9 Group	1	7. Reserved	
4. Incoming CO Group	1	8. 2nd Page of DSS Key G	2

Use the drop-down to select the listing.

Zone 504 Station Function-Station Level:


Zone504 Assign the station level

[Zone 504 Station Level]			
1. Override Level	1	5. Station Ringing Frequend	5
2. Monitor Level	1	6. Auto Secret Recording F	<input checked="" type="checkbox"/>
3. Message Waiting Level	1	7. Reserved	
4. Station Loud Bell Level	1	8. System Wide FWD Func	1

Use the drop-down menu to select the listing.

Zone 505 Station Function – General Function 1


Zone 505 is for programming Station function – General Function 1

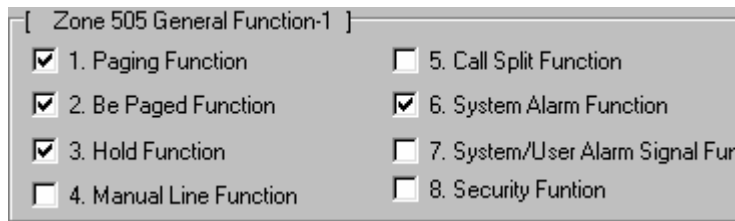

Click the blank area to activate the function. Activate Not Activate.

Zone 506 Station Function


Zone 506 is for programming Station Function – General Function 2.

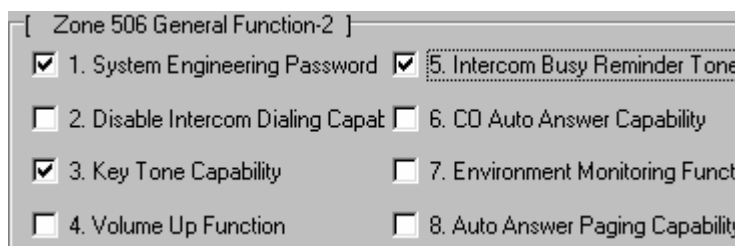

Click the blank area to activate the function. Activate Not Activate

Zone 507 Station Function – General Function 3


Zone 507 is for programming Station Function – General Function 3.

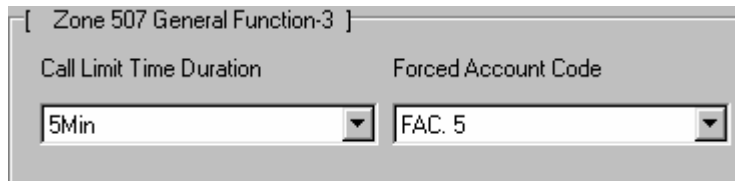

Use the drop-down menu to select the listing

Zone 508 Station Function – Hot Line


Zone 508 Assign the station hot line feature.

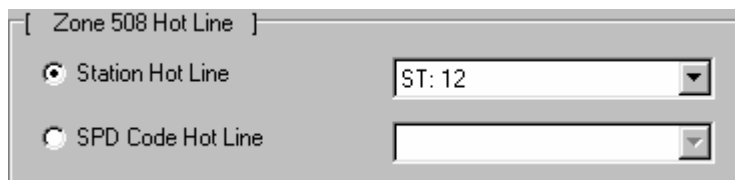

Click the option Station Hot Line or SPD Code Hot Line and then use the drop-down menu to select the listing.

Zone 509 Station Function-Individual SPD Block

Zone509 Divides the sets of individual Speed Dial Codes into a different system memory block.

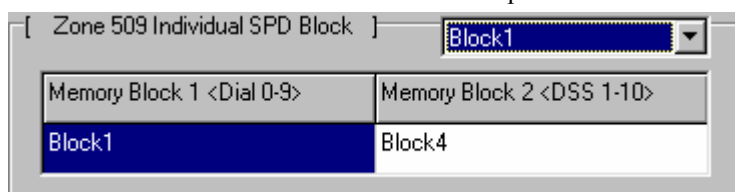

Click the memory block and then use the drop-down menu to select the listing.

Zone600-1 CO Function (Zone600~606,609)

This function editing area is combined with those in Zone600~Zone606 and Zone609

Zone600/601 **Zone602**

CO Number

Zone 604

Zone 605

Zone 606

Zone 609

Zone603

Items	IP.1	IP.2	IP.3	IP.4
Day	11	12	13	14
Night	11	12	13	14

Zone 600/601 Incoming Ringing Assignment:

Zone600/601 Assigns incoming ringing stations (Zone600 on day time, Zone601 on night time). Relate to CO Number setting.

[Zone 600/1 Incoming Ringing Assignment]				
Items	IP.1	IP.2	IP.3	IP.4
Day	11	12	13	14
Night	11	12	13	14

Click the option and then use the drop-down menu to select from the list, or you can enter the station number directly. Also, the system will confirm if the station numbers already exists.

Zone 602 Door Ring Assignment:

The stations assigned here will ring when the Door Phone call is activated.

Items	IP.1	IP.2	IP.3	IP.4
Door 1	11	12	13	14
Door 2	11	12	13	14

Click the option and then use the drop-down menu to select from the list, or you can enter the station number directly. Also, the system will confirm if the station numbers already exists.

Zone 603 CO Group Assignment

Zone603 Assign the CO lines can be accessed by the station.

Items	Item.1	Item.2	Item.3	Item.4
Group.1	01	02	03	04
Group.2	01	02	03	04
Group.3	01	02	03	04


Click the option and then use the drop-down menu to select from the list, or you can enter the station number directly. Also, the system will confirm if the station numbers already exists.

Zone 604 CO Function Assignment

1. CO TYPE: 5 Caller ID < CLI > Installed
2. Pulse/DTMF: 1 Tone Signal and DISA Enabled Time is /
3. DISA/ECF Capabilit: 3 Day & Night DISA Enable
4. ECF Capability: 0 Disable ECF
5. Pick Up Capability: 3 Day & Night Enable
6. Loud Bell Capability: 0 Disable
7. Incoming Ringing M: 0 Common Audio on [Zone 600]
8. Incoming Ringing M: 0 Common Audio on [Zone 601]

Click the option and then using the drop-down menu to select the listing.


Zone 605/606/609 CO Assignment:

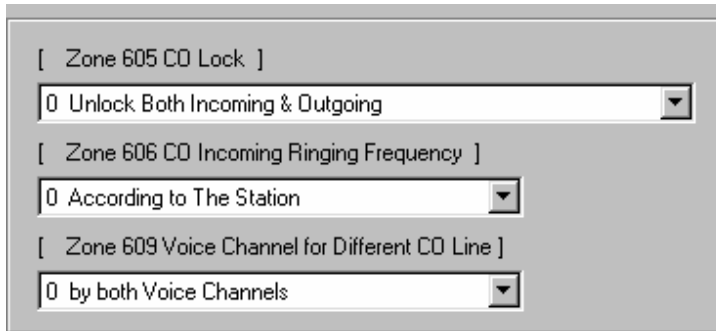

Click the option and then use the drop-down menu to select from the listing.

Zone 612/613 ISDN Setting:

Zone612 ISDN Termination Zone613 ISDN Type

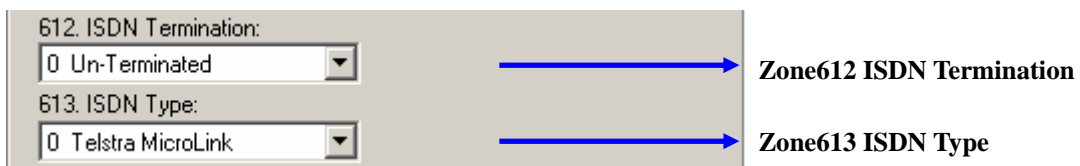


Click the option and then use the drop-down menu to select the listing. Zone 612 ISDN Termination and Zone613 ISDN Type.

The ISDN feature will be different for each model.

Zone 614/615/616 CO Special Setting:


Zone614 EH64 Time Zone615 CO Conference Zone616 CO Special Function

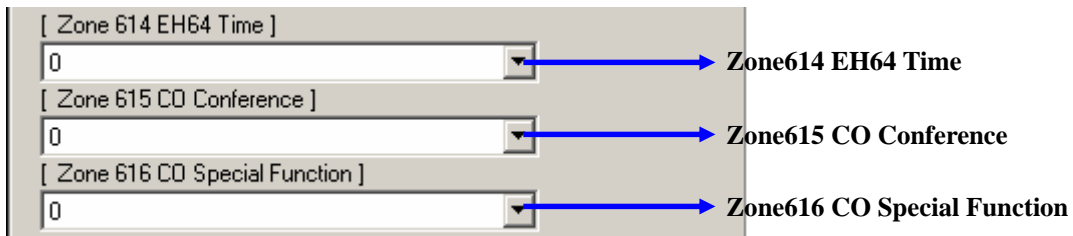


Click the option and then use the drop-down menu to select the listing. Zone 614 EH64 Time, Zone614 CO Conference, Zone616 CO Special Function

The feature will be different for each model.

Zone600-2 CO Function (Zone607~608,ISDN)

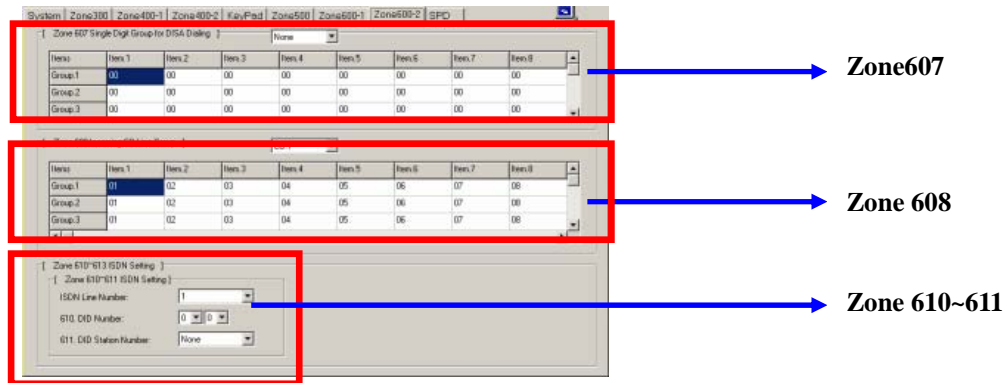


Zone 607 Single Digit Group For DISA Dialing

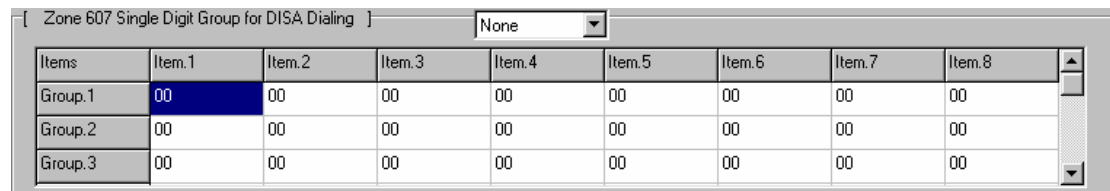

Click the option and then use the drop-down menu to select from the list, or you can enter the station number directly. Also, the system will confirm if the station numbers already exists.


Zone 608 Incoming CO Line Group

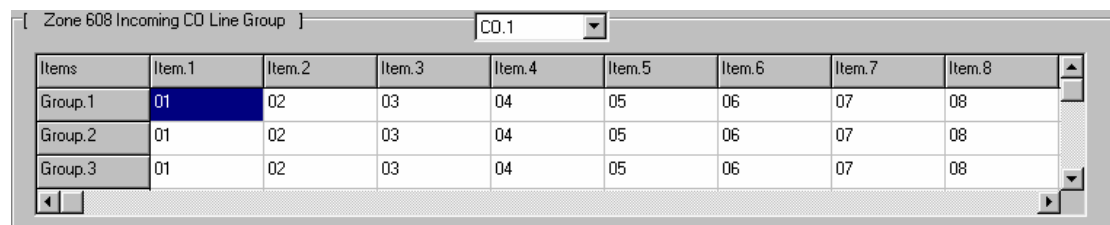

Click the option and then use the drop-down menu to select from the list, or you can enter the station number directly. Also, the system will confirm if the station numbers already exists.

Z610/611 ISDN Setting

Zone610 ISDN DID Number Zone611 ISDN DID Station Lookup

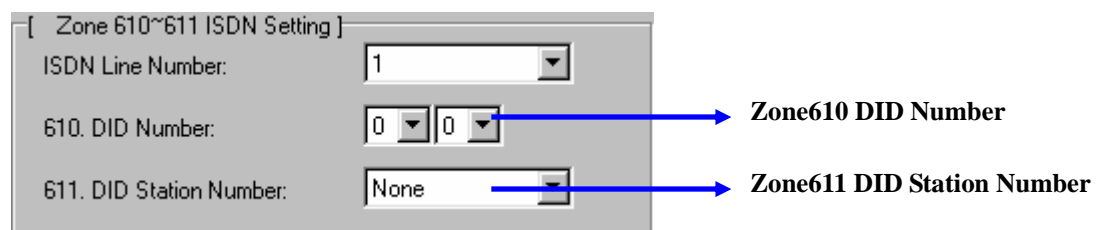


Click the option and then use the drop-down menu to select from the list, or you can enter the station number directly. Also, the system will confirm if the station numbers already exists.

SPD-Speed Dial Code Assignment (Zone404)

(1) SPD Number

(2) CO Assignment

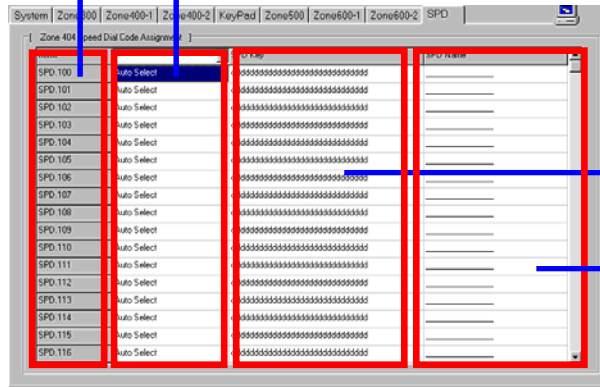

(3) Telephone Number

(4) SPD Name

(1) SPD Number:

The SPD index

(2) CO Assignment

Click the option item and use the drop-down menu to select the listing of which CO line will be used on Speed Dialing.


(3) Telephone Number:

This is including some numbers and special characters such as F, p, T and d, _ .

(4) SPD Name:

This can be set when Zone227 is enabled.

This will show the feature being used and the status.

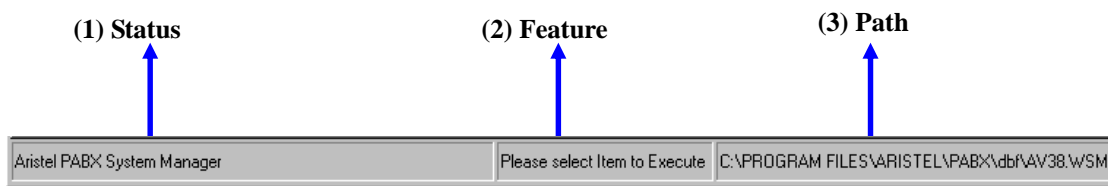

Status

(1) Status

This will display the description and suggestion when you click the function which is being used

(2) Feature

This will display which function is being used when you click the function.

(3) Path

This will display the file path which is being edited.

Status Icon Description

This will appear the connection status on the right site of main screen.



□ RS232 Connection, the data be translated.



□ RS232 Disconnection, please check the wiring and try again.



□ RS232 Transmission, from PBX to PC.



□ RS232 Transmission, from PC to PBX.



□ Modem Connection, the data is being transmitted.



□ Modem Disconnection, please check the wiring and try again.



□ Modem Transmission, from PBX to PC.




□ Modem Transmission, from PC to PBX.

Issue Description

The Aristel systems that are Applicable to this System Manager:


This Windows System Manager is applicable to the Analog Systems (AV-8, 12, 16, 24, 38, and AV-256) and the Digital Systems (DV-38).

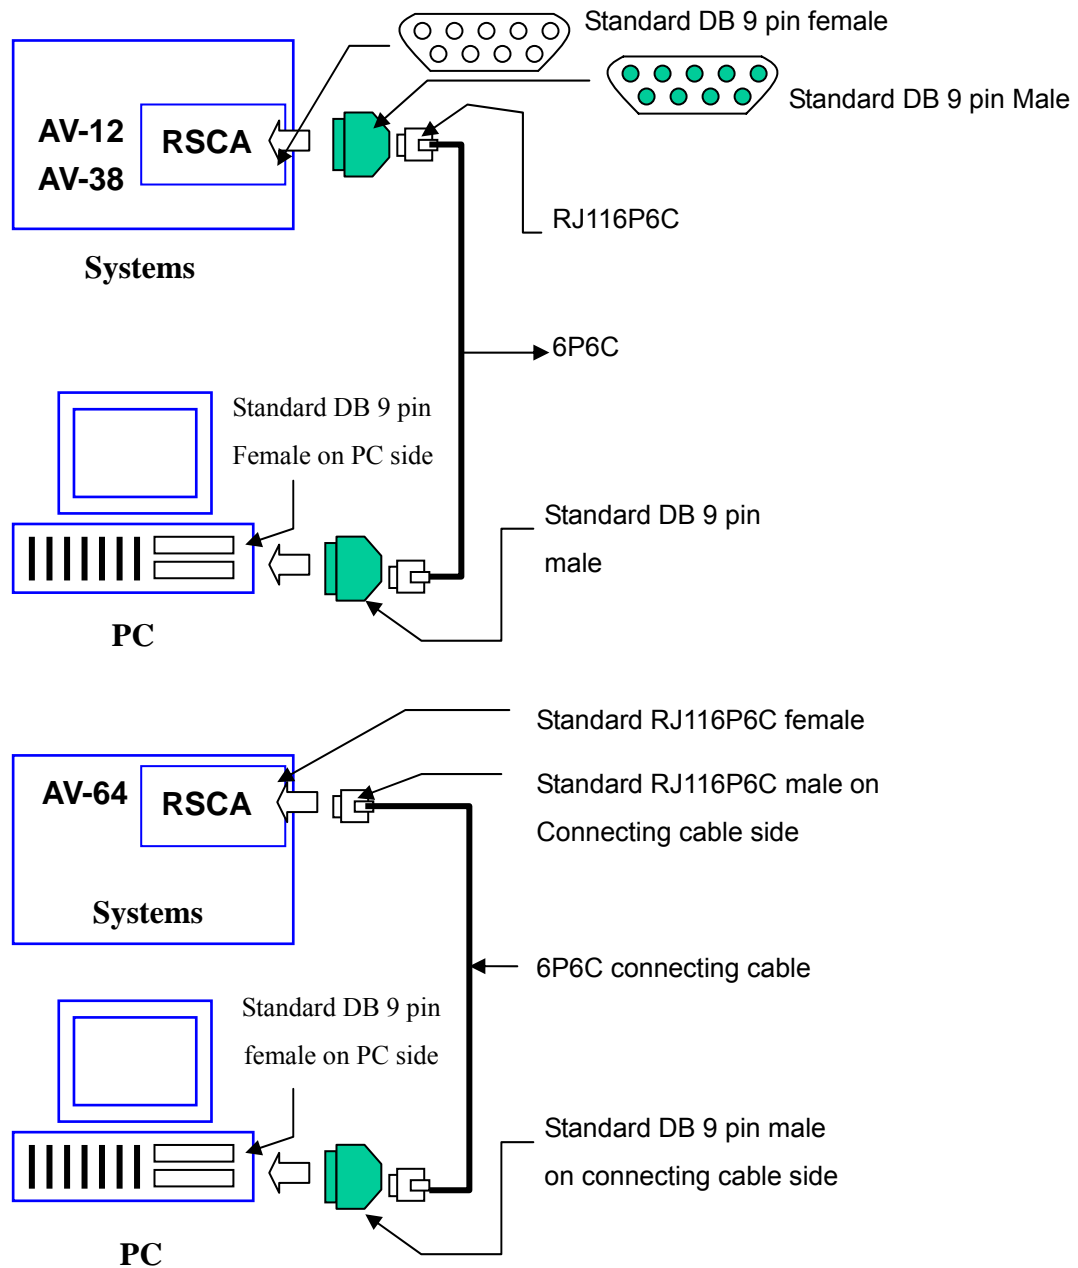

(2) Remote Programming and installation Modem use :

- ♦ This does not support AV-12 system.
- ♦ Install RPC card (modem card) in the AV-16/24/38/256 systems: AV-38

(A6RPCA), AV-64/256 (A2RPCA).

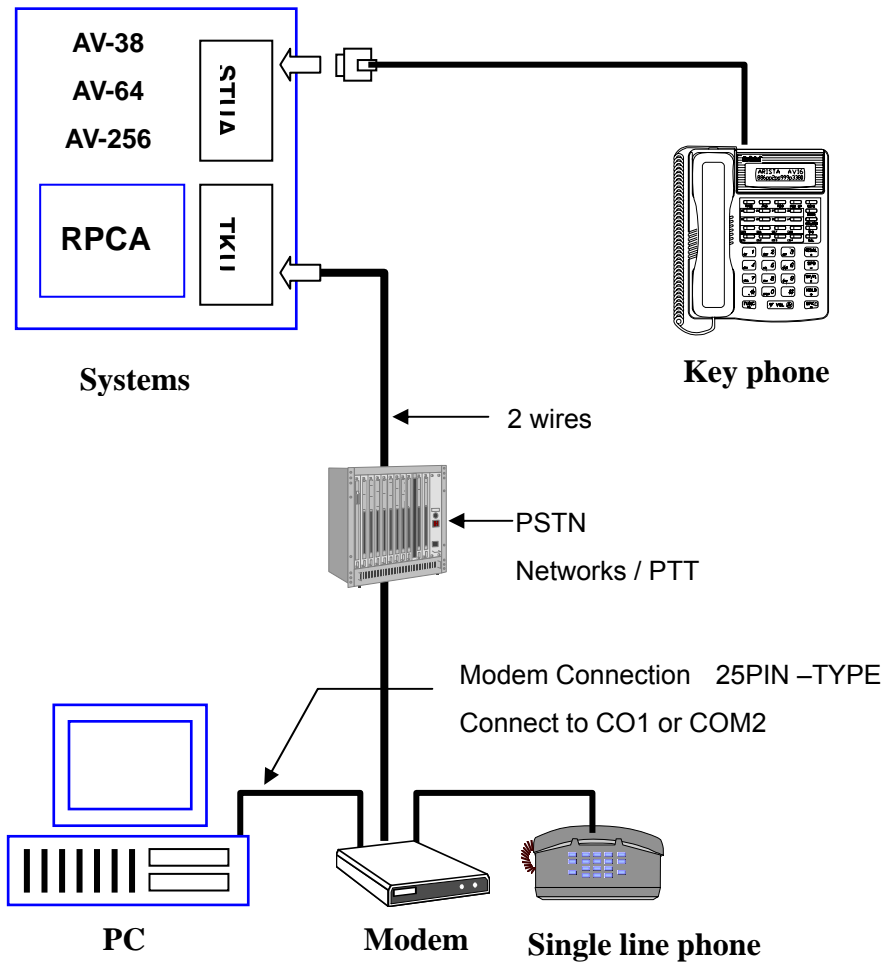

◆ **The Modem Connection Standard and Specification:**

1. Baud Rate 2400 bps
2. Byte Size : 8 bits
3. Start Bits Don't Care
4. Stop Bits 1 bit
5. Parity Check: None

◆ **While the Remote Programming is activated, a keyphone is taken over when programming**


Please refer to the **Hardware Setting** regarding the Modem feature.

How to make WSM to access System Parameter Setting through DISA

Please note the following setting and refer to the DISA feature parameter as step:


- (1) Enable DISA Modem Remote Programming Password in Zone 301 item 7
- (2) Dealer makes an incoming call to the user’s system through DISA line for Remote Programming function and is answered: Zone 400-07-02

- (3) Click the toolbar icon  to start the setting window:

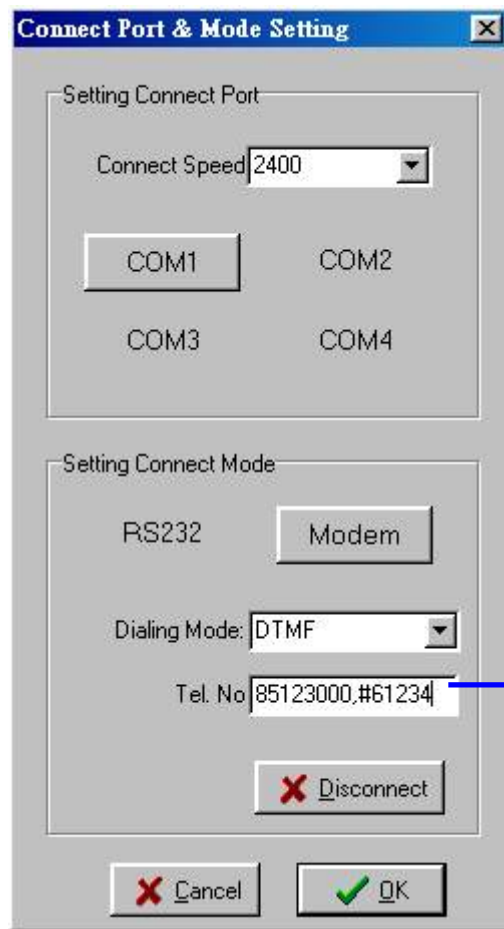


Enter the telephone number and DISA Modem Remote Programming Password.
 Eg:
 The telephone number is 85123000, add a comma (or commas) for a 1 sec pause and then # 6 and password.
 As below:
 Tel No + , + #6+ Password

- (4) Select the Modem icon and select OK to start the DISA Modem Remote Program.

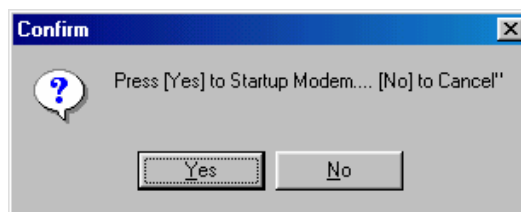

- (5) Modem is ready and select YES to start.

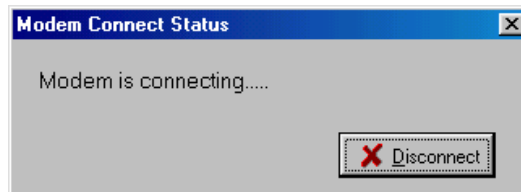

You will now hear the Modem handshaking tone.



- (6) If the connection is successful, it will display the success window or when the connection faulty, it will display the below window.



When the connection is successful, all processes are the same as with RS232.

- (7) Please remember to disconnect the connection when the programming is finished.